
MORATTI
motorcycles

User manual

moratti scooter trikes

Available in multiple language

English | Indonesia | Tön | Anáo | Français | Pyróxim | Deutsch | Indér o | Español | Dünen | Italiano | Polski | Tön | Letório

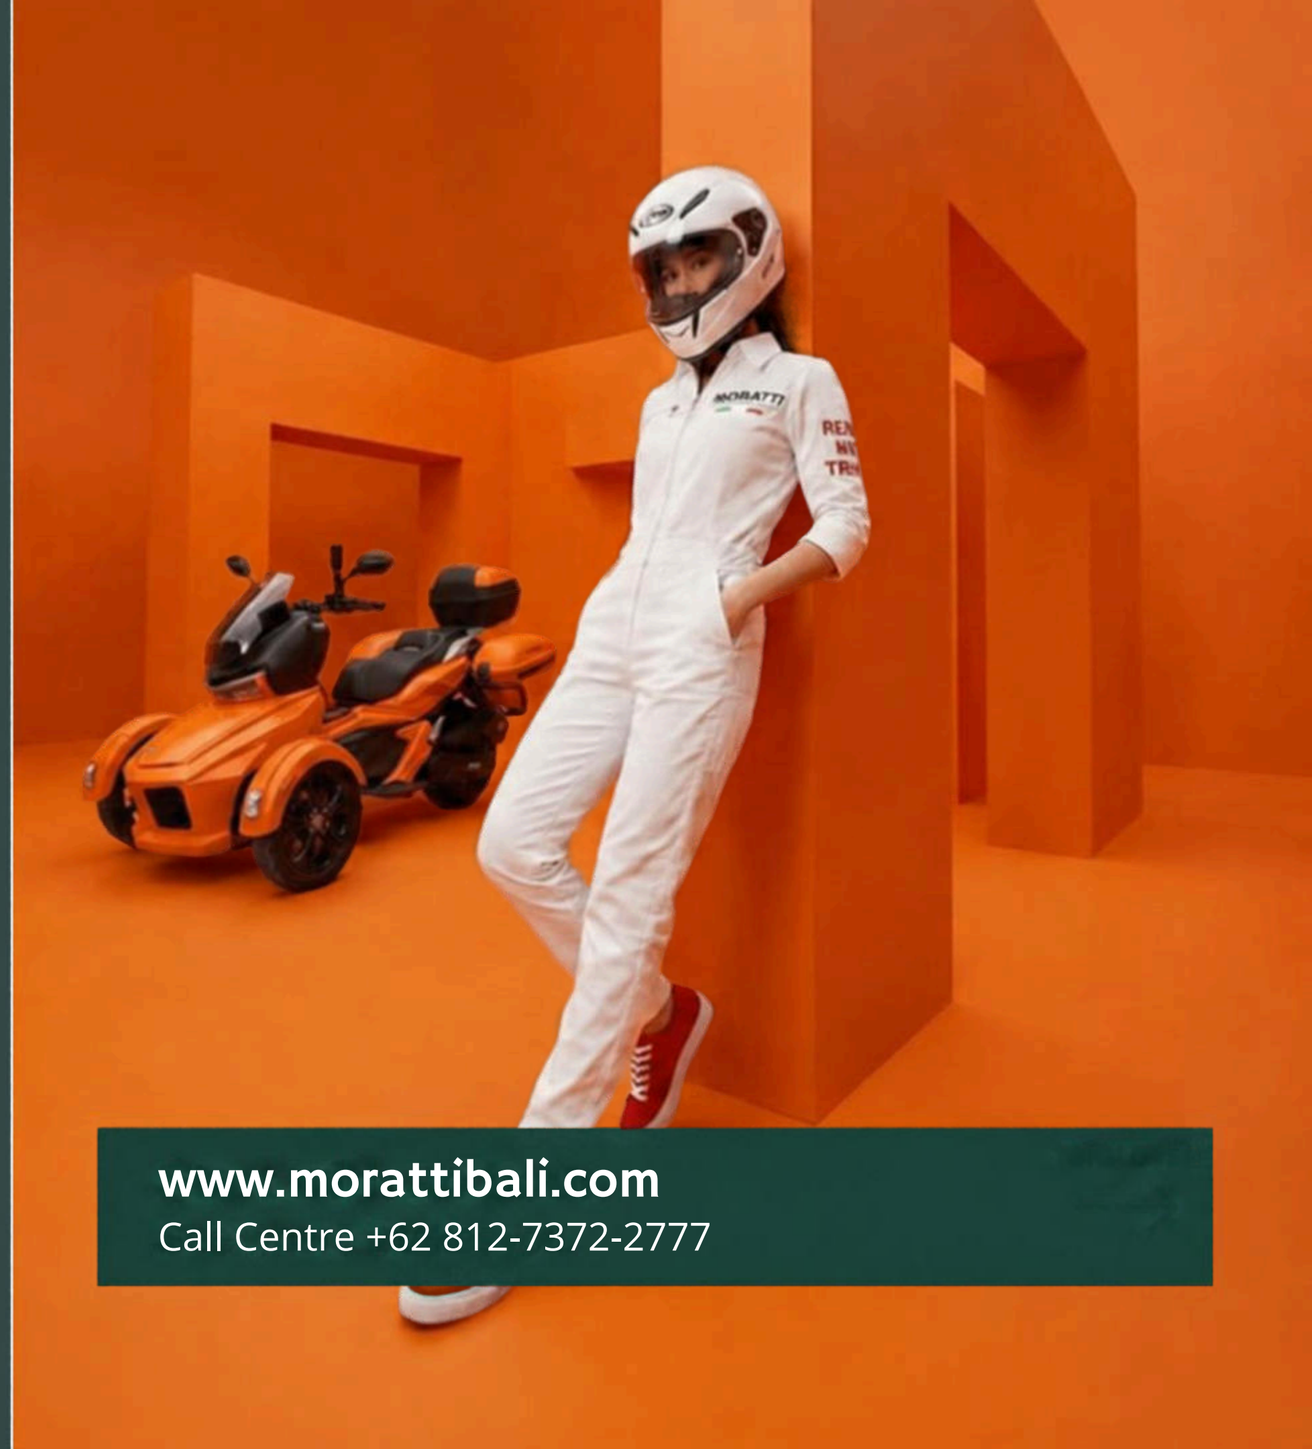

RIDER INSTRUCTIONS

1. UNDERSTAND ALL INFORMATION IN THIS MANUAL, INCLUDING SAFETY PRECAUTIONS AND WARNINGS REGARDING HAZARDOUS SITUATIONS.

2. UNDERSTAND THE EMERGENCY PROCEDURES FOR OPERATING THE MORATTI SCOOTER.

3. UNDERSTAND ALL WARNING LABELS ATTACHED TO THE MORATTI SCOOTER.

4. DO NOT DISASSEMBLE THE SCOOTER OR ANY OF ITS PARTS. PLEASE CONTACT THE MORATTI CALL CENTER FOR REPAIR SERVICES OR REPLACEMENT NEEDS.

5. KEEP THIS MANUAL IN A SAFE PLACE. ALL SCOOTER PARAMETERS HAVE BEEN CONFIRMED TO MEET NATIONAL STANDARDS BEFORE LEAVING THE FACTORY.

6. OBEY ALL TRAFFIC LAWS AND ROAD SIGNS IN ACCORDANCE WITH REGULATIONS GOVERNING PASSENGER AND GOODS TRANSPORTATION. ALWAYS ENSURE ROAD CONDITIONS AND SCOOTER CONDITIONS ARE SAFE TO AVOID DANGEROUS SITUATIONS.

7. AVOID RIDING IN SEVERE WEATHER SUCH AS STORMS OR STRONG WINDS. IN RAINY CONDITIONS, REDUCE SPEED AS BRAKING DISTANCE WILL BE LONGER.

8. AVOID USING THE HIGH BEAM WHEN LIGHTING CONDITIONS ARE ALREADY SUFFICIENT. CONTINUOUS USE OF THE HIGH BEAM MAY DISTURB THE VISION OF ONCOMING DRIVERS AND PEDESTRIANS, AFFECTING ROAD SAFETY.

9. TURN OFF THE SCOOTER AND KEEP THE FOB KEY SAFELY AFTER USE. DO NOT ALLOW CHILDREN TO PLAY AROUND THE SCOOTER TO AVOID UNWANTED INCIDENTS.

10. WEAR PROPER SAFETY EQUIPMENT SUCH AS AN SNI-CERTIFIED HELMET AND OTHER PROTECTIVE GEAR IF NEEDED, SUCH AS GLOVES AND A MASK.

11. THE MAXIMUM SPEED OF THIS SCOOTER IS 50 KM/H. DO NOT EXCEED THIS SPEED, AS IT MAY ENDANGER BOTH THE RIDER AND OTHER ROAD USERS.

TO HELP ENSURE YOUR SAFETY AND THE SAFETY OF OTHERS, PLEASE PAY ATTENTION TO THE FOLLOWING

1. DO NOT LEND YOUR MORATTI SCOOTER TO ANYONE WHO IS UNABLE TO OPERATE IT PROPERLY, TO PREVENT INJURY.

2. ALWAYS COMPLY WITH ALL APPLICABLE LAWS AND REGULATIONS WHILE RIDING ON PUBLIC ROADS.

3. DO NOT RIDE WHILE UNDER THE INFLUENCE OF MEDICATION THAT MAY AFFECT YOUR ABILITY TO RIDE, WHILE INTOXICATED, OR WHEN YOU ARE NOT FIT/HEALTHY.

4. MAKE SURE TO RIDE ONLY ON FLAT AND EVEN ROADS FOR BOTH FRONT WHEELS TO REDUCE THE RISK
OF ACCIDENTS



MORATTI
motorcycles


CHECK ITEMS & ACCESORIS








REMOTE, STORAGE BOX KEY, AND FRONT TRUNK KEY
/ SCOOTER DOCUMENTS COMPLETENESS
/ HELMET SNI

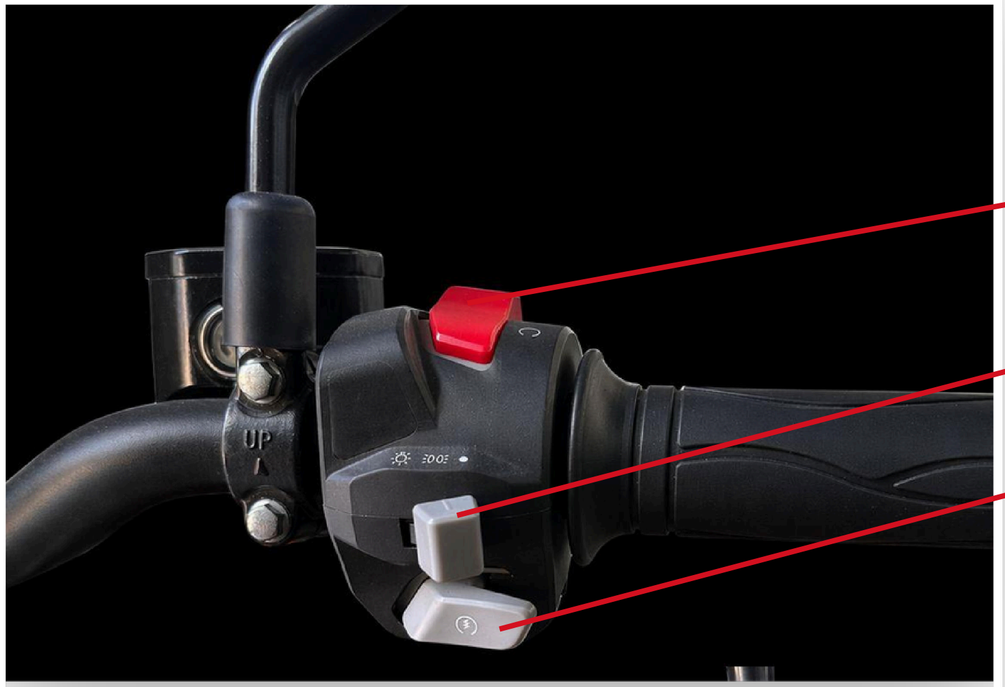

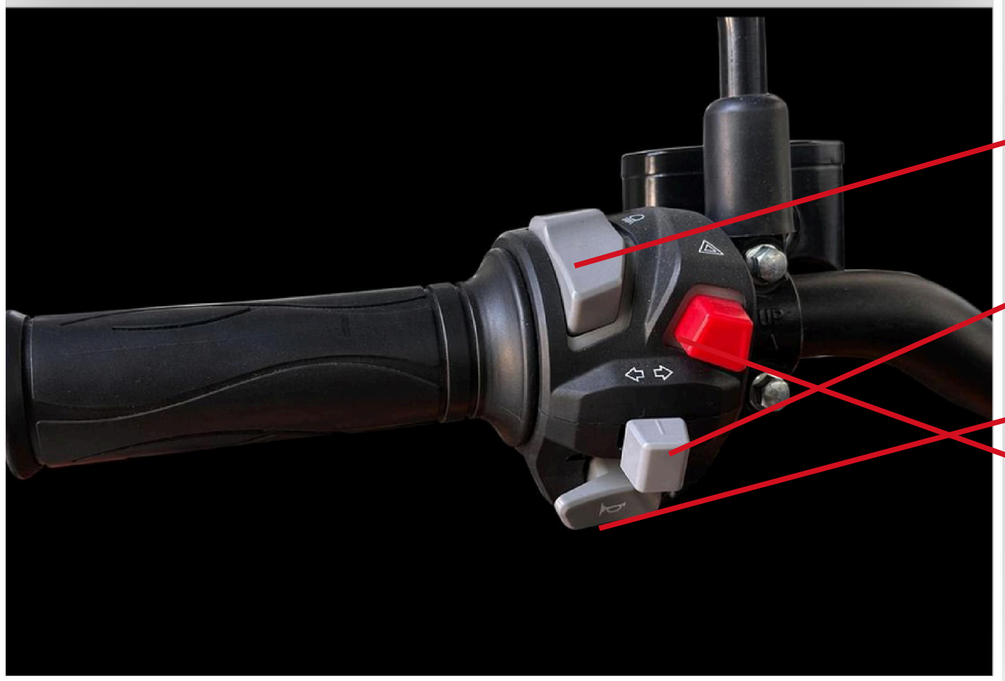

RIGHT HANDLE BAR

01 **Engine Stop / Standby Button**
Used to turnoff the engine or place the scooter in standby mode

02 **Light Switch Button**
Used to turn on the parking lights and the main headlights.

03 **Engine Start Button**
Used tostart theen gine.

LEFT HANDLE BAR

04 **Low Beam / High Beam Switch**
Used to switch between low beam and high beam headlights..

05 **Left / Right Turn Signal Switch**
Used to activate the left or right turn signals.

06 **Horn Button**
Used to sound the Horn


07 **Hazard Light Switch**
Used to activate both turn signals at the same time for emergency warning.

MORATTI motorcycles



Reverse Transmission Position

Forward Transmission Position

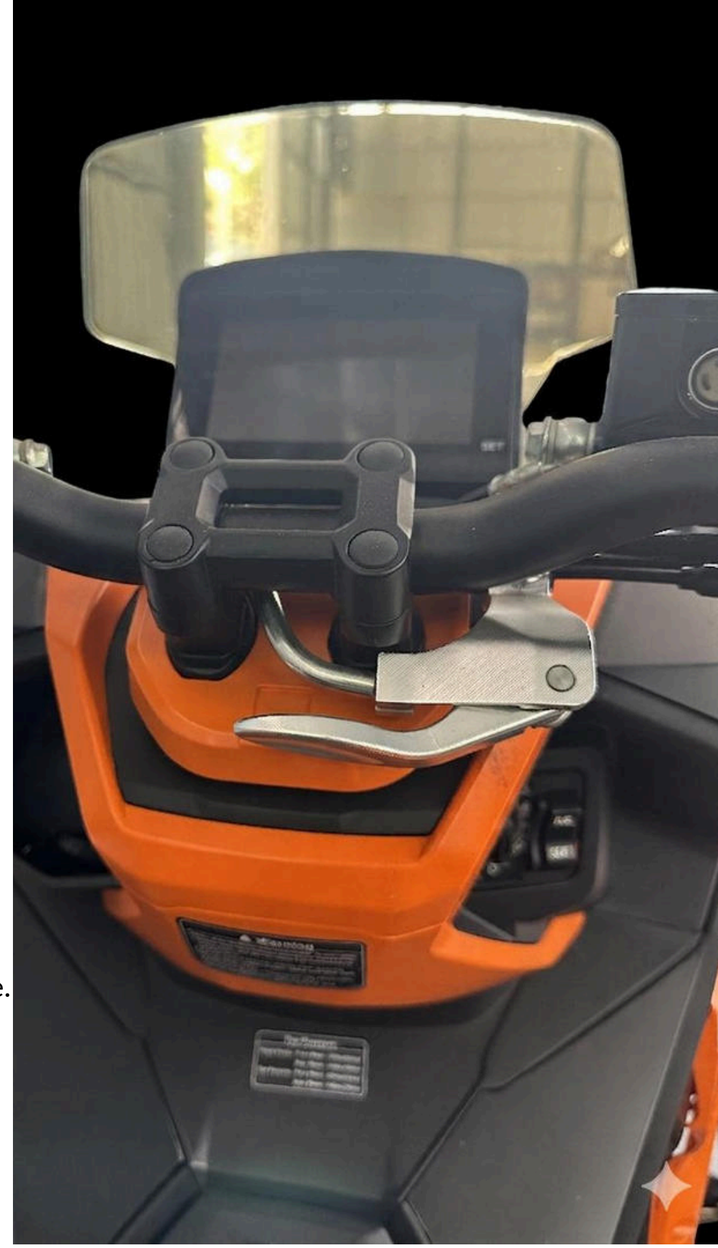

Notes for using reverse transmission:

1. The scooter must come to a complete stop before switching between forward/reverse.
2. Do not change gear while opening the throttle.
3. Reverse is only for parking or slow maneuvering.

MORATTI motorcycles

MORATTI motorcycles

LED Display Icons Description



Left Turn Signal
Blinks when the left turn signal is activated.

High Beam
Illuminates when the high beam is on.

Neutral Indicator
Lights up when the transmission is in neutral.

Position Lights
On when the position or parking lights are on.

Fuel Level Warning
Indicator for low fuel level. Refuel soon.

Connection Indicator
Shows connectivity status (e.g., to mobile app or system).

Clock (55:55)
Displays the current time.

Check Engine (MIL)
Indicates an engine or emission system fault.

ABS Warning
On if ABS is active or if there is an ABS system issue.

Right Turn Signal
Blinks when the right turn signal is activated.

Traction Control
Indicates traction control is active or has a fault.

Battery Warning
Alerts for charging system or battery issues.

Auto Start/Stop
Shows Auto Start/Stop system status (active/available).

ODO/TRIP (55555.5)
Odometer or trip meter reading (miles or km).

KNOB INFORMATION



POWER
Turns the electrical power on or off (ignition).
ON to start the vehicle,
OFF to turn it off.

LOCK
Locks the handlebar.
Press (PUSH) then turn the knob to the LOCK position.

I (ON)
Ignition ON position.
Electrical power is active, the vehicle is ready to start.

SEAT FUEL
Indicates access to the SEAT and FUEL functions via the buttons on the right.

O (OFF)
Ignition OFF position.
All electrical systems are off.

PUSH
Press to release the handlebar lock or move the knob to the next position.


FUEL
Press the FUEL button to open the fuel tank cap.

SEAT
Press the SEAT button to open the seat.



MORATTI motorcycles

How to start the Engine

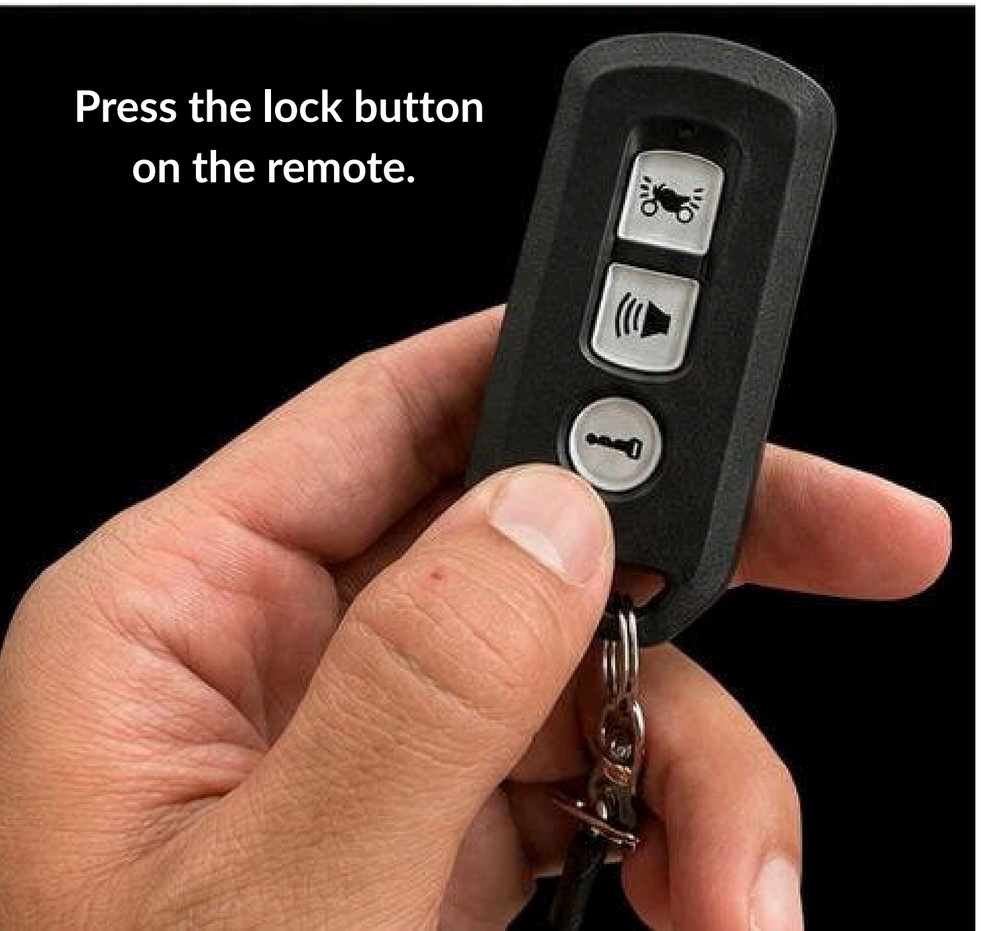





MORATTI
motorcycles

RIDING TIPS

- Keep your speed under 45 km/h.
- Check your mirrors regularly to give way to overtaking vehicles, especially cars.
- Keep a safe distance from other vehicles.
- Stick to paved roads and avoid uneven surfaces.
- If you must cross rocky or uneven terrain, slow down and ride carefully.
- Do not stand on the scooter while riding.





USB CHARGER

Our scooter is equipped with a USB charger and phone holder.

Make sure that if you want to operate both devices, the scooter is already stopped.

Some additional information and Notes about Moratti



01 Characteristics of the Moratti Trike Scooter

- The steering feels heavier compared to a regular motorcycle.
- Do not make sharp turns at high speed.
- Always make U-turns slowly.

02 Emergency assistance

- Call center : +62 812 7372 2777
- Available hours : 10.00 am – 10.00 pm

03 Fuel Type

- PERTAMAX ONLY

04 Maximum load / Passenger Limit

- Maximum passenger : Maximum 2 persons
- Maximum load capacity : Maximum load 150 kg